

UltimaTouch™ 1800 Series Touch Screen POS Workstation

INSTRUCTION GUIDE FOR RE-PACKAGING THE UNIT



This guide provides instructions for re-packaging a UT1800 that has been removed from the original shipping carton. If the UT1800 is not packaged properly then it will be prone to damage from shipping. The workstation must be placed properly into the overpack box and the cardboard inserts must be inserted in the correct orientation to protect the unit from damage.

Instructions

- Disconnect the AC power cord and all peripheral cables from the UT1800.
- Unscrew the MSR module (if installed), slide it over and disconnect the USB cable to remove the module from the UT1800. See MSR uninstall steps on page 5 for details.
- Remove the Customer Display (if installed) and unplug the connector to remove the display from the UT1800. See Customer Display uninstall steps on page 6 for details.
- Place the UT1800 workstation into the large plastic bag.

Make sure that base pad is installed in the overpack box. The rear of the UT1800 should be oriented toward the 'open' section of the base pad (shown at the bottom of the picture at right).



Place the UT1800 workstation into the overpack box, on top of the base pad, oriented as shown in the picture.

The power cable should be placed in the insert located just in front of the display.



Place the display insert over the front of the LCD.



Assemble the square channel insert toward the back of the unit, ensuring that the flap extends over the unit.



Push the top insert over the existing packaging ensuring that it is flush with the top of the box.

Fold over the four box flaps and seal with packaging tape.

The MSR and Customer display modules can be placed in their original packaging. If the original packaging is not available, the modules can be securely wrapped using bubble wrap and returned in a standard box.

**Notes:**


- Please do not ship any extra material in the box. Additional items may cause damage to the unit while in transit.
- Please be sure to remove the MSR and Customer Display if part of your configuration. Shipping with the MSR or Customer Display in place may cause damage in transit.

Magnetic Strip Reader (MSR) uninstall instructions

MSR uninstall instructions are only for those configurations that have purchased and previously installed this option.


1. Loosen and remove screws.

Use a screwdriver to loosen and remove the two screws securing the MSR unit. This will allow removal of the MSR housing from the main unit by gently sliding the MSR out.

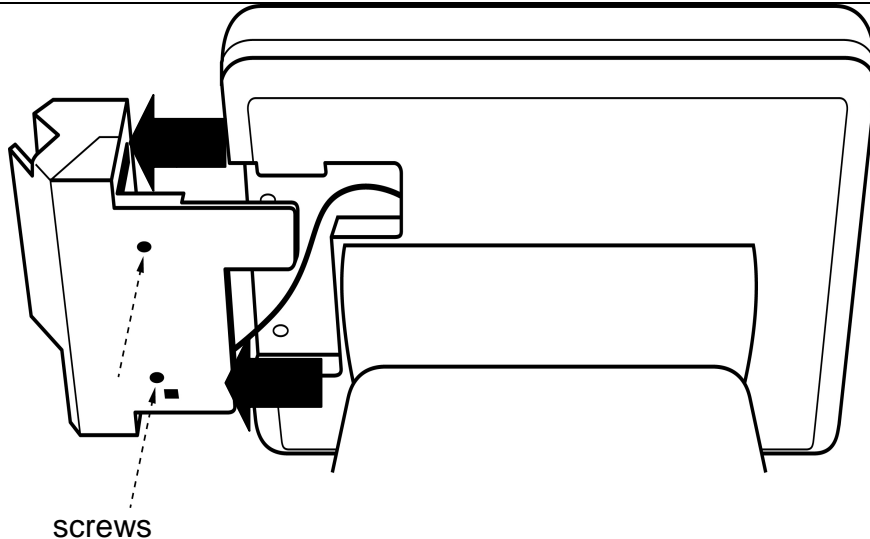

2. Remove USB cable.


Disconnect the USB connector from the USB port at the side of the main unit. Slide cable and connector out.

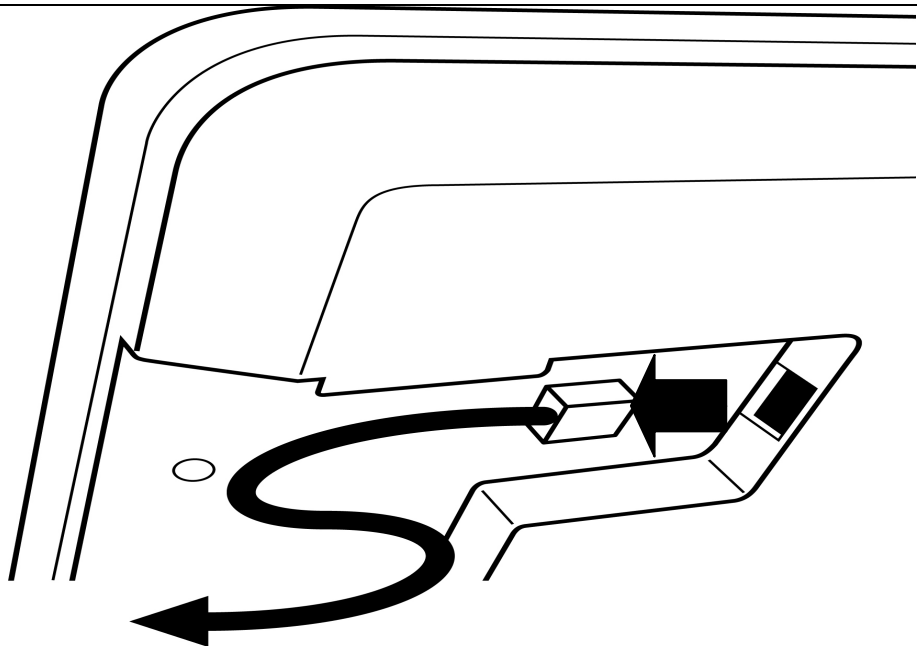


Customer Display (optional) uninstall instructions

Customer display uninstall instructions are only for those configurations that have purchased and previously installed this option.


1. Lift the display up. Firmly grasp the display and rock back and forth while pulling upwards. The display will become unseated from the mechanical snap connector and travel up on the two rails.

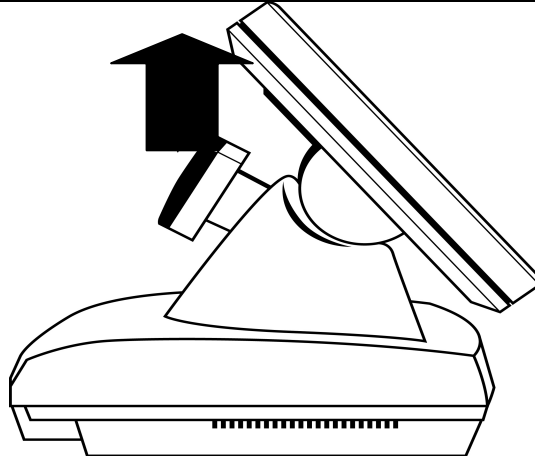

2. Disconnect the cable. Disconnect the cable between the Customer Display and the main unit.

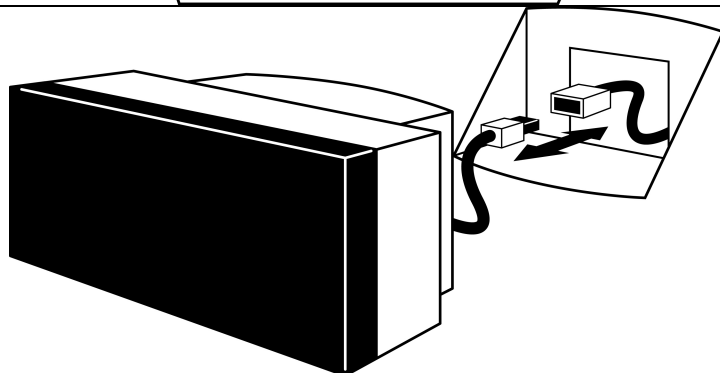

3. Replace the front cover. The UltimaTouch™ 1800 ships with a cover panel over the Customer Display attachment position. Align the bottom edge of the cover panel and snap into place.

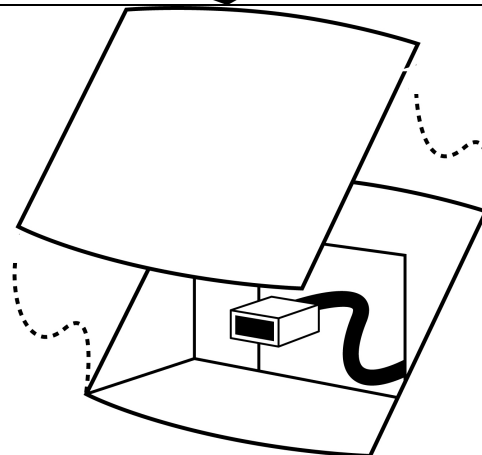

This document may not be used for any purpose other than its intended use. This document must be downloaded or reproduced in its entirety; it may not be stored or transmitted in part without the prior written permission of UTC RETAIL. All attempts have been made to ensure that the information presented in this document is correct. No liability, expressed or implied, will be assumed by UTC RETAIL, its dealers, or affiliates, for damage resulting from the use of this information.