

# MSR Bracket Installation Guide

This guide is designed to help you efficiently assemble a UTC RETAIL MSR Bracket to a Vesa Mount LCD.

## Components:

You will find the following components inside the MSR Box (see Figure 1):

- Item 1 MSR with Bracket Assembled
- Item 2 (4) Phillips Mounting Screws

## Steps:

- Step 1) Lay the monitor carefully on its face being careful not to scratch or drop it.
- Step 2) If there is a stand attached to the monitor, remove it by reversing the actions in Steps 4, 5 and 6. The parts seen below and a Phillips screw driver are what is needed to complete the installation.

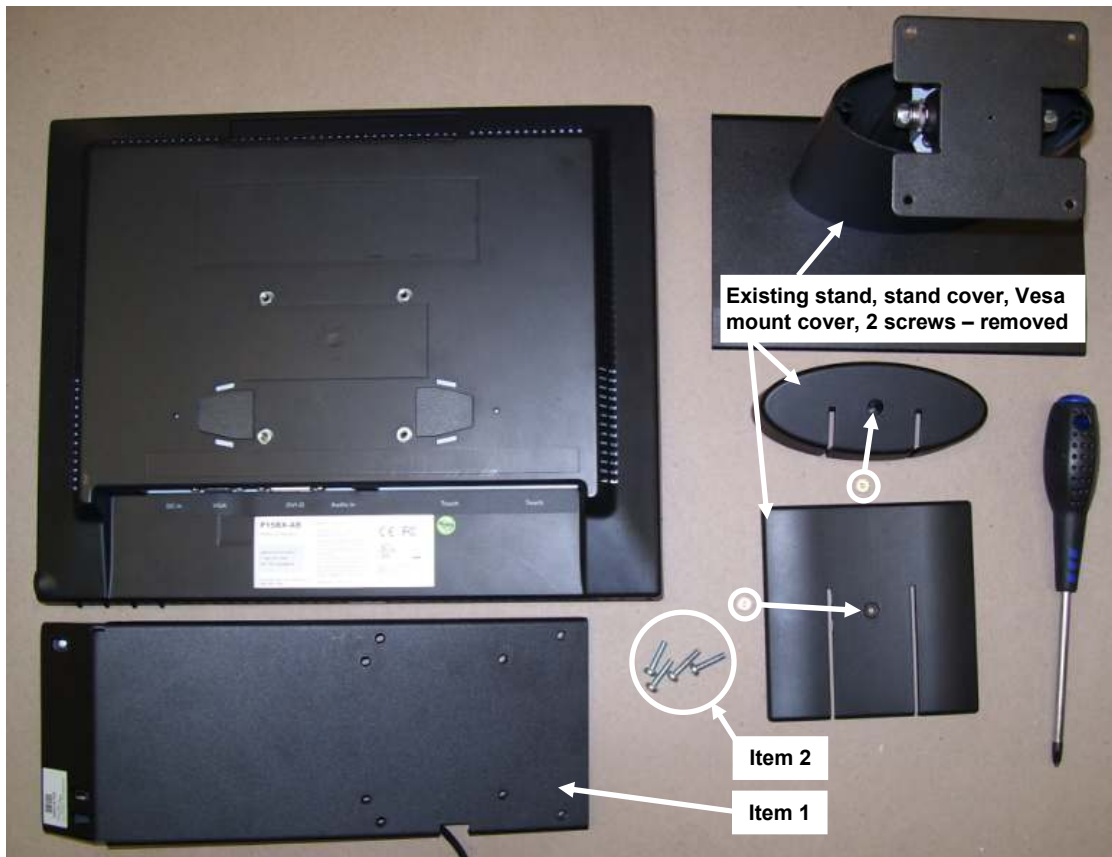


Figure 1

Step 3) Align the MSR bracket's holes with the mounting holes on the back of the monitor. Route the attached MSR cable under the bracket and through the cutout. (See Figure 2).



Figure 2

Step 4) Place the stand on the bracket, aligning the screw holes. Insert the 4 Phillips screws through the stand, the bracket, and then into the monitor. Start all 4 screws before tightening. Be careful not to over-tighten the screws. (See Figure 3 and observe the photo insert for the placement of the 4 screws).

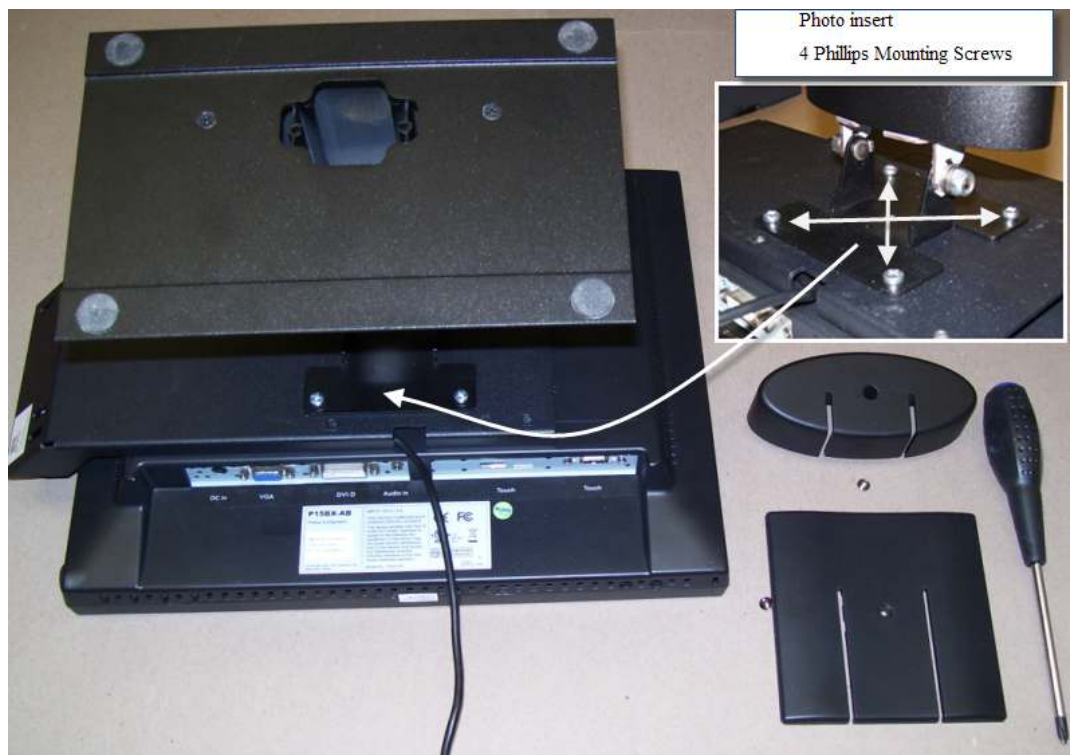


Figure 3

Step 5) Slide the plastic cover (removed in Step 2) over the Vesa mount on the back of the display's stand and install its Phillips screw. (See Figures 4 and 5)



**Figure 4**



**Figure 5**

Step 6) Install the stand cover (removed in Step 2) over the stand hinge (See Figure 6). Install the single screw to secure the cover. (See Figures 7 and 8). This completes the MSR bracket installation.



Figure 6



Figure 7





**Figure 8**

**Note:** If you have any problems with the installation please contact UTC RETAIL Technical Support at 800.349.0546